ONE-BOX™ Non-Metallic Outlet Boxes

Secure Installation • Mounts Directly to a Wood or Steel Stud






1 Attach ONE-BOX to wood or steel stud with captive installation screws. If box is too far forward or back, back the screws out to



2 Pull wire through NM cable connector. (ships installed)



1 Position ONE-BOX adjacent to stud. Use box as template to cut hole.

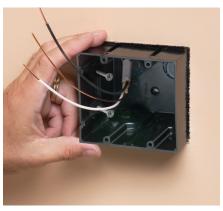

2 Pull wire through installed NM cable connector. Insert ONE-BOX.



3 Mount ONE-BOX directly to stud with shipped in place screws.








F103

Arlington®

1 Stauffer Industrial Park Scranton, PA 18517 800/233.4717 • Fax 570/562.0646 www.aifittings.com

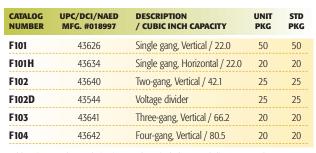

Add suffix 'GC' when ordering in Canada, to include ground clip, for example F101GC















Patented ONE-BOX 2007 REV0121